

GETTING STARTED

Congratulations on purchasing a Digital Blue UTURN Camera with SNAP! software. The UTURN Camera lets you morph images on its screen as they're taken and the Turn feature lets you see yourself in the view screen to take fun self-portraits!

TO INSTALL THE SOFTWARE:

1. Insert the SNAP! software CD-ROM into your CD-ROM drive.
2. If the program doesn't automatically begin, go to the desktop and double-click My Computer. Double-click the CD-ROM drive that contains the SNAP! software. If this doesn't start the installation program, double-click "setup.exe".
3. Follow the instructions on the screen.

INSTALLING THE BATTERIES

Your UTURN Camera is powered by 3 AA batteries.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Only use the battery specified by the manufacturer.

TO INSTALL THE CAMERA BATTERIES:

1. Locate the battery door and lock on the front of the camera.
2. Use a tool or coin to turn the battery door lock counterclockwise as far as it will go.
3. Slide the battery door to the side, then lift it to the open position.
4. Insert the batteries using the battery polarity symbols (+ and -) as a guide.
5. Slide the cover back into position and turn the lock to the closed position.

CAMERA COMPONENTS




BATTERY DOOR – Open to install the batteries.

CAMERA LENS – Make sure to keep the camera lens clean and clear when trying to capture photos.

CAPTURE BUTTON – Press to take a photo.

TV OUT – Plug the provided cable in here to connect your camera to your TV.

USB PORT – Plug the provided USB cable in here to connect your camera to your computer to download your photos.

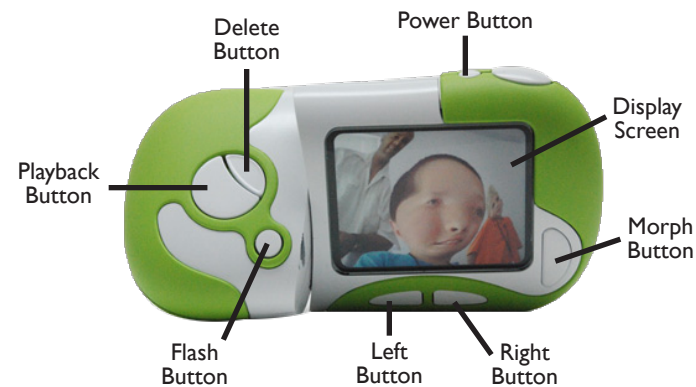

DELETE BUTTON – Use to delete images from the camera.

DISPLAY SCREEN – Use to preview your shots and to view your photos.

FLASH BUTTON – Use to change the Flash settings.

MORPH BUTTON – Use to enter and exit Morph Mode.

PLAYBACK BUTTON – Use to enter and exit Playback Mode.

POWER BUTTON – Use to turn the camera on and off.

LEFT BUTTON – Use to scroll to the previous image in Playback Mode or to the previous Morph effect in Morph Mode.


RIGHT BUTTON – Use to scroll to the next image in Playback Mode or to the next Morph effect in Morph Mode.

CAMERA DISPLAY SCREEN

The Camera Display screen provides information about your camera settings.



BATTERY STATUS ICON – Shows how much battery life the camera has left. When the Empty image appears, make sure to change your batteries immediately.

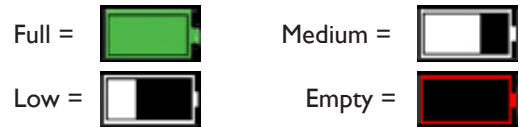

FLASH SETTING – Shows which flash setting you are in.

Auto On (default) = Always On = Flash Off =

MORPH ICON – Displays what effect is active when the camera is in Morph mode.

PICTURE COUNTER – Shows the number of photos you can still take with the camera.

MEMORY FULL – If your camera memory is full, this icon will appear on your screen. Delete media from your camera to free up space.

DELETE AND DELETE ALL – Flashes as you delete images from the camera.

TURN FEATURE

The Turn feature on your UTURN Camera allows you to turn half of the camera so you can see yourself in the display screen and take fun self-portraits!

TO USE THE U TURN FEATURE:

Gently turn the side of the camera with the lens, moving it so the lens is pointing at yourself – you will then see your image in the display screen.



You will hear a click when the camera has locked into the turned position. Do not try to turn the camera past the locked position. Forcing the camera past the locked position will break it.

NOTE: The flash mode automatically changes to "Flash Off" when the camera is turned. However, you can still change the flash settings when the camera is in the turned position.

CAMERA MEMORY

The camera will store images to the camera. Your camera can store approximately 80 images in its internal memory.

TO TURN YOUR CAMERA ON:

Hold the Power button down for 3 seconds. The camera will turn on.

CAMERA MODES

Your UTURN Camera has 2 modes: **CAPTURE**, which you use to take photos and **PLAYBACK**, which allows you to view and delete pictures you have taken with the camera.

Within Capture mode, you can select **MORPH**, which allows you to use the Morph effects to take funny pictures.

TAKING PHOTOS WITH YOUR CAMERA

When you turn the camera on, it will be in Capture mode, ready to take regular photos. To take a picture, simply press the Capture button. Hold the camera still until the picture has been captured.

TAKING MORPHED PHOTOS

Morph mode has 12 effects that allow you to take tons of funny pictures. Scroll through and experiment with the various effects – every picture will be different!

TO USE MORPH MODE:

1. Press the Morph button. This will take you to Morph mode.
2. The Morph icon will appear in the upper right hand corner of the Display Screen.
3. Use the Left and Right buttons to scroll through the effects and find the one you want to use. The Morph icon will change to show the effect that is active.
4. Once you have chosen your effect, press the Capture button to take a photo. The camera will automatically morph your photo so you can see the effect immediately!

VIEWING PHOTOS ON THE CAMERA

Playback Mode is used to view the pictures you have taken on your camera.

TO VIEW A PHOTO:

1. Press the Playback button. This will take you to Playback mode.
2. The last picture you have taken with the camera will display.
3. Use the Right and Left buttons to scroll through the pictures you have taken.

Press the Playback button to exit Playback mode.

DELETING PHOTOS FROM THE CAMERA

You can delete photos from the camera either while you are reviewing photos in Playback mode, or while in Capture mode.

TO DELETE THE PHOTO YOU JUST TOOK WITH THE CAMERA

1. In Capture mode, press the Delete button.
2. The Delete icon will appear, asking if you wish to delete the item.
3. Use the Left or Right button to select ✓.
4. Press the Delete button to confirm your choice.

TO DELETE ONE PHOTO AT A TIME:

1. In Capture mode, press the Playback button to enter Playback Mode.
2. Use the Right and Left buttons to scroll through your photos until you see the one you want to delete.
3. When the photo you want to delete is on the Display Screen, press the Delete button.
4. The Delete icon will appear, asking if you wish to delete the item. Use the Left or Right button to select ✓.
5. Press the Delete button to confirm your choice. The photo will be deleted.
6. Once your photo is deleted, you'll return to scrolling through stored photos.

TO DELETE ALL ITEMS ON THE CAMERA AT ONCE:

1. In Capture mode, press the Playback button to enter Playback Mode.
2. Press and hold the Delete button for at least 3 seconds.
3. The Delete All icon will appear, asking if you wish to delete all items.
4. Use the Left or Right button to select ✓.
5. Press the Delete button to confirm your choice.
6. All the photos stored on the camera are now deleted.

NOTE: If no button is pressed within 5 seconds after the Delete button is pressed, the player will not delete the photo and will return to the previous camera mode.

SOFTWARE HELP FILE

Your SNAP! software has an extensive help file. If you encounter any questions while using your software, open the file menu, and select "Help".

TO LAUNCH THE HELP FILE:

Click Start > Programs > SNAP! 3.0 > SNAP! Help

NEED ADDITIONAL HELP?

For additional product support, visit our website at: www.digiblue.com and click on the Customer Service tab at the top of the page.

If you are still having problems with this product, contact Customer Support at 888-800-0502 Monday-Friday between 9am-6pm (CST).



All rights reserved. All brands and product names are trademarks of their respective owners. TM and © 2009 Digital Blue, Inc. All rights reserved.

Distributed by Digital Blue.,
1517 Johnson Ferry Rd., Marietta, GA. 30062

Safety Warning

Avoid spilling any liquid onto or into the player. Do not leave the player in a location near heat sources; in a location subject to direct sunlight, excessive dust, sand, moisture, rain or mechanical shock; on an unlevel surface; or in a car with the windows closed during periods of excessive heat.


IC Declaration

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC Declaration

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Compliant with ASTM F963 Toy Standards

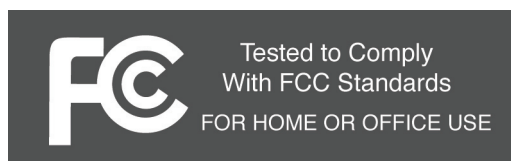

USER GUIDE